

#### WHY JUST INSTALL A

## **SHOWER**

WHEN YOU CAN

## **TRANSFORM**

YOUR SHOWER SPACE OR YOUR WHOLE BATHROOM WITH KINEWALL

**Kinewall** bathroom wall panels from Kinedo offer you a fantastic alternative to tiles.

Whether you are adding a shower or renovating your whole bathroom **Kinewall** is easy to install, and with over 70 designs to choose from you can create the perfect bathroom whatever your style.

**MORE** THAN **DESIGNS** 



#### AN INNOVATIVE SOLUTION


















1250 X 2500 **STOCKED IN** 21 DESIGNS IN THE UK

3 mm


polyethylene core

**AVAILABLE IN** 6 SIZES

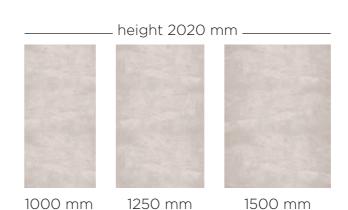





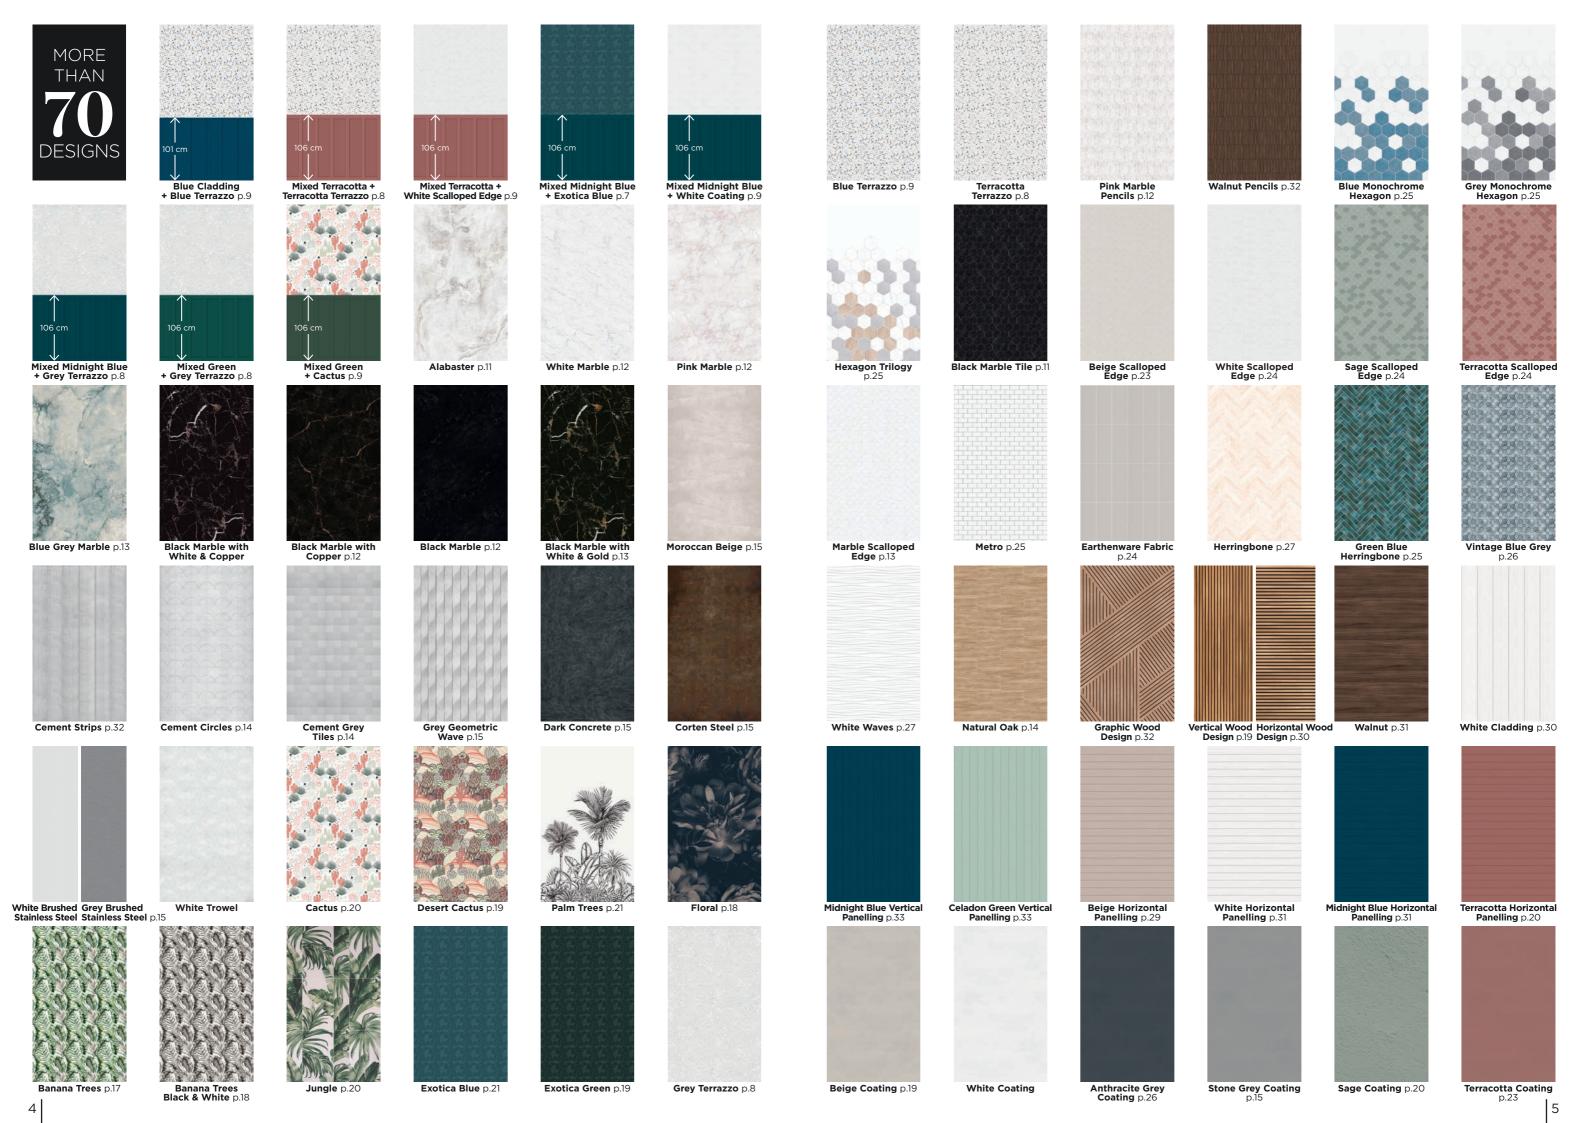


## MIXED DESIGNS

With such a range of styles, colours and patterns to choose from you can have one design for your whole bathroom or choose a design for just your shower area or around a bath or basin. Why not mix and match patterns to create that perfect designer look. Our mixed panelling range of Kinewall designs are perfect to create this look.



Designs chosen Mixed Midnight Blue + Exotica Blue with Exotica Blue

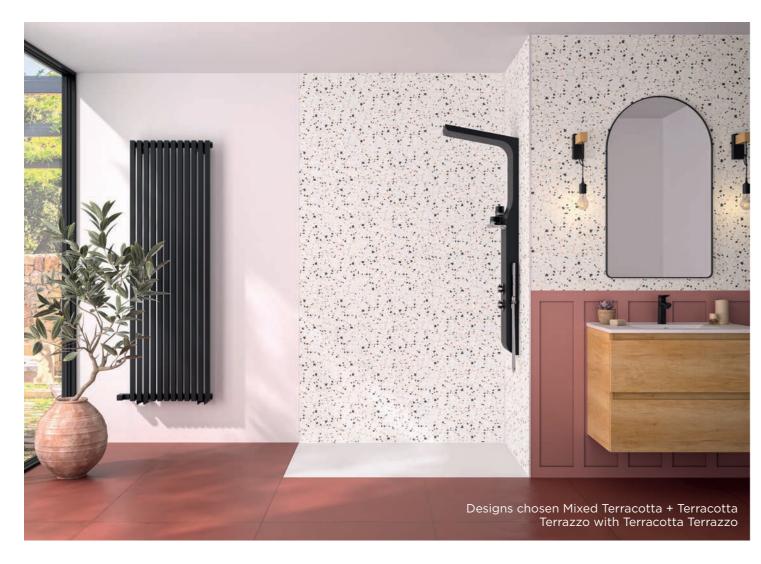













#### GET THE INDUSTRIAL LOOK WITH

### MINERALS & METALS

Create the perfect New York loft look by mixing raw materials such as concrete and cement with mineral or metallic elements. Add in the elegance of marble and a touch of gold or copper to the white, black and grey colour pallet and you can create this look. You can also add your own elements such as a splash of colour to this trend to create a bespoke designer loft look.
































14 |

# **NATURE** Bringing the outdoors in creates a relaxing mood, but adding a bold print can make your bathroom feel like a spa experience every day! Mixing bold pattern with natural woods and the natural colour palette you can create the perfect calming space or a bold exotic room depending on your taste.



Designs chosen Banana Trees with Walnut

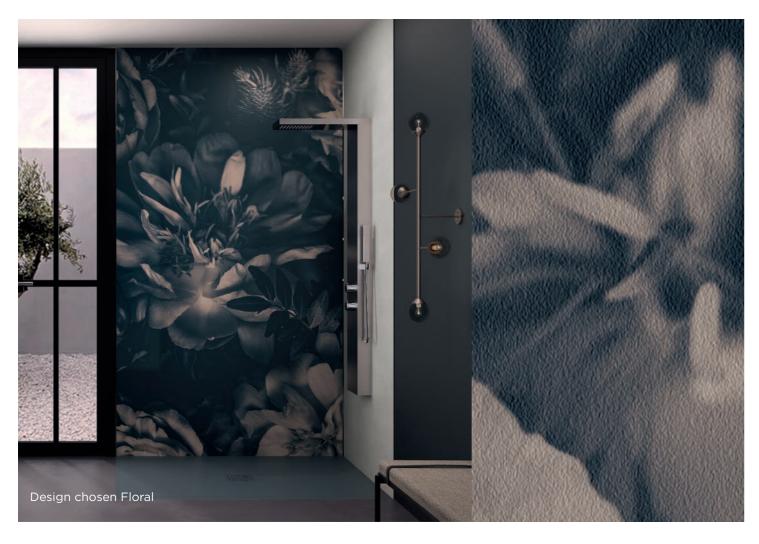















## PATTERNS & GEOMETRIC

The latest trends in patterns and geometric designs are available on our wall panels. Tiles, scalloped edge, hexagon, herringbone or even cement tiles, you can choose the design that suits your taste and personality.

With different colours and bold patterns you can create a big impact in a small space or you can mix and match to create the perfect look for you.



Designs chosen Beige Scalloped Edge with Terracotta Coating






























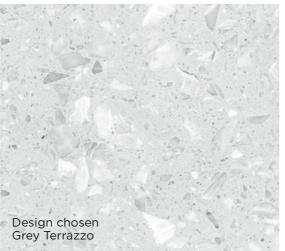



## WOOD

Whether you want to create the perfect Scandinavian look, a gorgeous seaside chalet or a quintessential English cottage, wood can help you to create the perfect look.

From classic wooden strips to modern graphic wood design or simple panelling, Kinewall has a variety of designs to choose from to help you create the theme you want in your bathroom.



Design chosen Beige Horizontal Panelling






Design chosen White Horizontal Panelling


Design chosen Midnight Blue Horizontal Panelling

Design chosen Beige Horizontal Panelling

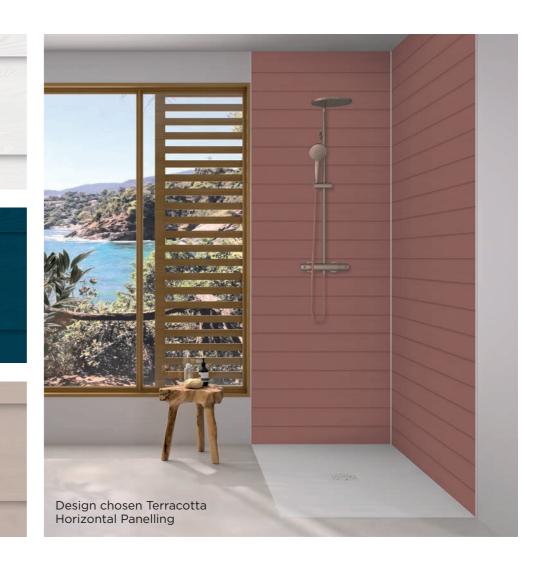





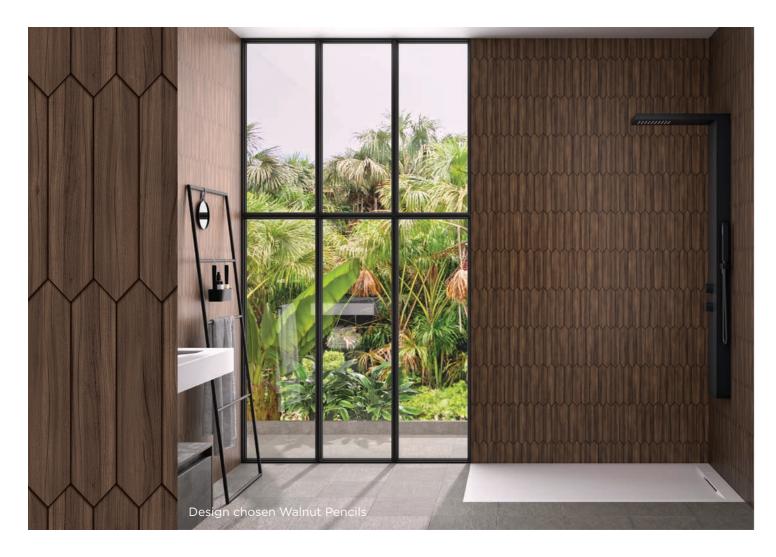







#### YOUR CHOICE OF **INSTALLATION**





 Inside corner profile -L shaped



 Outside corner profile -L shaped



• U shaped profile




· H shaped profile










- Metal strip for mounting 2 panels together without profile
- Kit (magnet) for use with metal strip

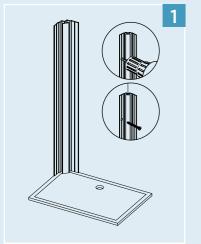

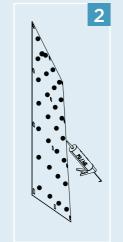


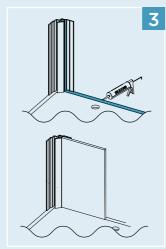

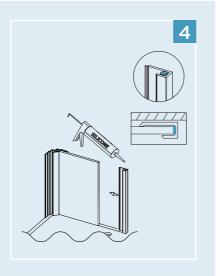

- 1 Screw the corner profile to the wall
- 2 Put the adhesive on the back of the panel then attach the PU or MS polymer glue pads
- 3 Silicone the inside of the corner profile as well as the edge of the tray then insert the panel which has already been cut or drilled to size as needed
- 4 Silicone the end profile then slide it onto the panel

Repeat steps 2 - 3 and 4 for the second side then **finish with an end profile** on the final panel

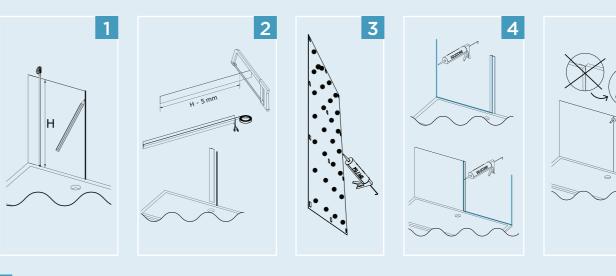

- 1 Present the panel, measure the total height and make a mark at the right end of the panel
- 2 Cut the metal strip, subtracting 5 mm from the measurement made above. Position the adhesive on the back and stick the strip to the wall
- 3 Put the adhesive on the back of the panel then attach the PU or MS polymer glue pads
- 4 Silicone the corner of the wall, the middle of the metal strip as well as the edge of the tray then insert the panel which has already been cut or drilled as needed. Repeat for the second panel
- 5 Use the magnet to help align the panels perfectly

Profile can be used on the final panel to finish the look

Without profiles



#### kinedo.co.uk

Visit our website for more information on Kinewall and to see our range of shower trays, enclosures and cubicles.

SFA Saniflo UK Limited
Unit 1, Watford Interchange
Colonial Way
Watford
Herts WD24 4WP
United Kingdom

Tel 020 8842 0033 Web www.kinedo.co.uk



As our policy is one of continuous product improvement we reserve the right to alter product specification without notice. All information in this publication is given in good faith. No responsibility can be accepted for any errors, omissions or incorrect assumptions. January 2024 – Photo credits: INSPI, 3D Render. 11/23 BROCH-0050.